ASUS K8V-X SE technical updates

8. Chassis intrusion connector (4-1 pin CHASSIS1) (page 1-23)

This lead is for a chassis designed with intrusion detection feature. This requires an external detection mechanism such as a chassis intrusion sensor or microswitch. When you remove any chassis component, the sensor triggers and sends a high-level signal to this lead to record a chassis intrusion event.

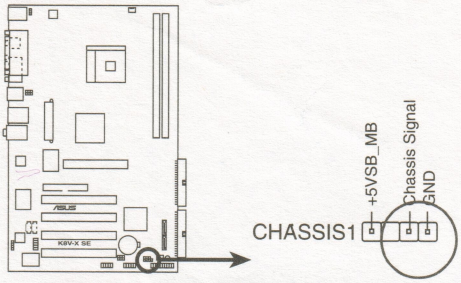

K8V-X SE Chassis intrusion connector

2.5.6 Hardware Monitor (page 2-26)

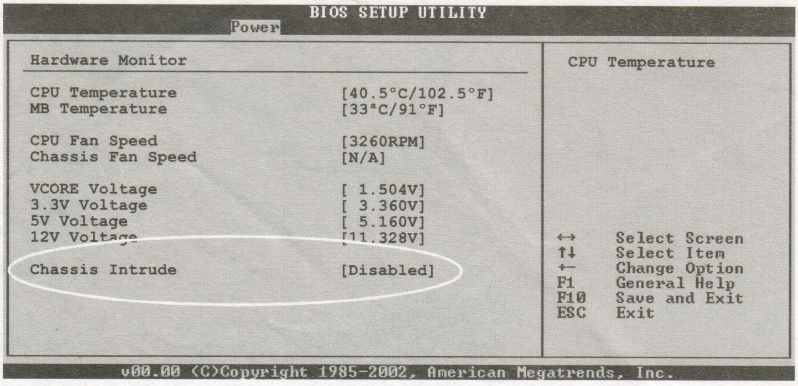

Chassis Intrude [Disabled]

This field allows you to enable or disable the chassis intrusion detection feature. Make sure to connect the chassis intrusion connector before enabling this item.

15G063574200